

EASTERN ♦ ACCENTS®  
UPHOLSTERED HEADBOARDS  
INSTRUCTION MANUAL



Congratulations on your upholstered headboard purchase! Eastern Accents' headboards feature superb craftsmanship and are designed to easily attach to most metal bed frames. This instruction manual details the installation process.

We recommend using the Leggett & Platt® Instamatic Bed Frame, sold separately. This metal bed frame is high quality and easily attaches to our headboard.

If you are using another metal bed frame, you may need to use our complementary adaptor kit. Instructions are included in this manual.

Please note:

- This assembly process is a two-person job. One person should hold the headboard steady while the other follows the assembly instructions.
- You will need a standard wrench to tighten nuts.
- Your headboard includes four built-in bolts, four washers, and four nuts.
- The adaptor kit includes an adaptor plate, four short bolts, and four lock nuts.

If you have any questions, please contact Customer Service at 800.397.4556.



# INSTRUCTIONS

*To attach the headboard to the bed frame, follow these instructions:*

## Step 1:

Remove the mattress and box spring from the bed frame.

## Step 2:

Remove the nuts and washers from the bolts in the headboard.

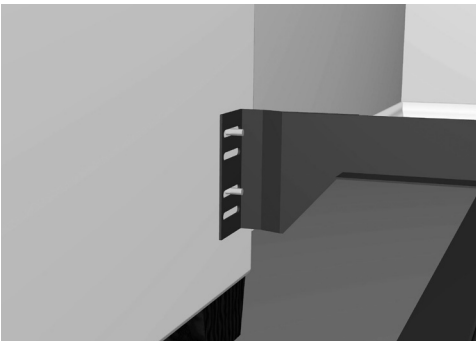


figure 1

## Step 3:

Line up the bed frame with the bolts on the right side of the headboard (see figure 1). If the bed frame does not align with all four bolts in the headboard, you will need to use the adaptor kit. Turn to the back of this manual for instructions.

## Step 4:

Place the washers and then the nuts back onto the bolts and tighten (see figure 2).

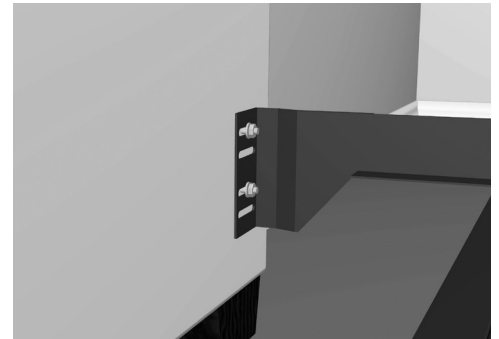


figure 2

## Step 5:

Repeat steps 3 and 4 for the left side of the headboard.

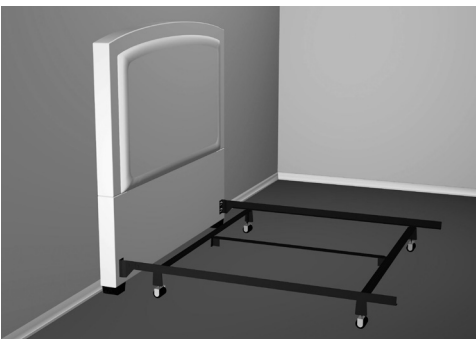


figure 3

Once the bolts are secured on both sides, the headboard and the bed frame are properly attached (see figure 3).

If the bed frame does not align properly with the bolts in the headboard (see figure 4), you will need to use the adaptor kit. Please follow these instructions to attach the headboard to the bed frame using the adaptor plates and provided hardware:

### Step 1:

Roll the bed frame away from the headboard slightly, but keep the frame lined up in the same position.

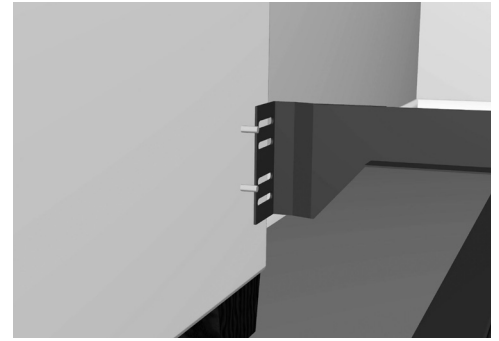


figure 4

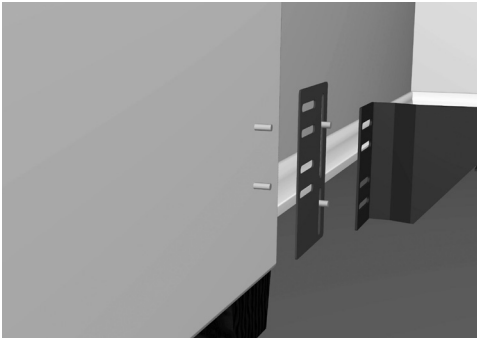


figure 5

### Step 2:

Hold one adaptor plate up to the bolts on the right side of the headboard. Position the plate so it aligns with both the bolts in the headboard and the slots in the bed frame.

To make this alignment easier, place two of the short bolts (included in adaptor kit) through the plate as shown (see figure 5). Position the short bolts so they will go through the slots in the frame. This will determine the ideal placement of the adaptor plate.

### Step 3:

Slide the adaptor plate onto the bolts in the headboard (using the position determined in Step 2).

### Step 4:

Locate the washers and nuts you removed from the bolts in the headboard.

### Step 5:

Holding the adaptor plate in position with one hand, use your other hand to place the washers and then the nuts back onto the bolts in the headboard. Tighten the nuts enough to hold the plate in position, but do not tighten completely (see figure 6). You may need to shift the plate from side to side in the next step.

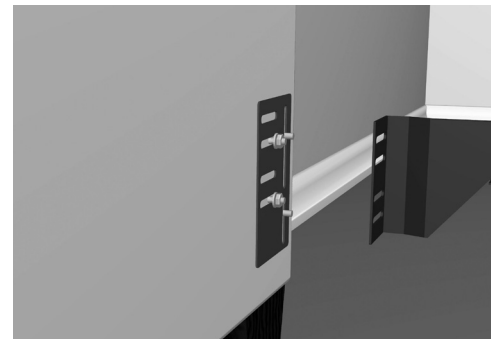


figure 6

### Step 6:

Line up the bed frame with the short bolts. You may need to shift the adaptor plate right or left, or move the short bolts up or down, in order for the short bolts and the slots in the bed frame to align properly.

### Step 7:

Once the alignment is correct, tighten the nuts securely.

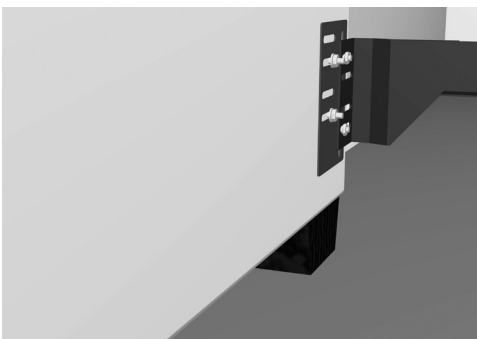


figure 7

### Step 8:

Locate the lock nuts included in the adaptor kit.

### Step 9:

Push the bed frame flush against the headboard.

### Step 10:

Place the lock nuts onto the short bolts to secure the frame to the adaptor plate (see figure 7).

### Step 11:

Repeat Steps 2-10 for the left side of the headboard.

# Upholstered Bed

## Assembly Instructions



Congratulations on purchasing an Eastern Accents upholstered bed! Our beds feature superb craftsmanship and are designed to be easily assembled. This manual provides simple, step-by-step instructions for assembling your new bed.

### Please Note:

- This assembly process requires two people.
- You will need a Phillips-head screwdriver.
- This bed is designed with center feet on the metal slats. **Do not remove these feet.** They support the mattress and box spring.

### Please check for the following items in this package:

- Headboard (1)
- Side rails (2)
- Low footboard (1)
- Metal slats with center feet (3)
- Screws (6)

If you have any questions, please contact Customer Service at 800.397.4556.

**EASTERN ♦ ACCENTS®**

Phone: 800.397.4556 • Fax: 800.998.3278 • [EasternAccents.com/Furniture](http://EasternAccents.com/Furniture)



# Assembly Instructions

STEP 1: Prop the headboard against a wall and connect one side rail to each side of the headboard, as shown in FIGURE 1.



FIGURE 1

STEP 2: Connect the footboard to both side rails, using the method from Step 1.

STEP 3: Adjust the width of the 3 metal slats so they reach both notched areas of the side rails, as shown in FIGURE 2.

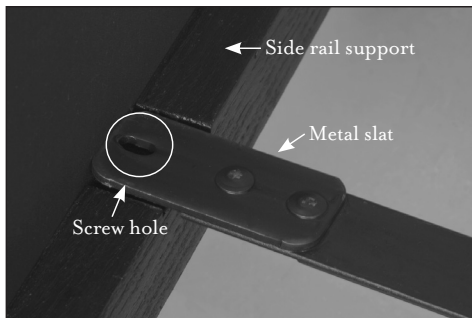


FIGURE 2

STEP 4: Tighten the brass clamps on the metal slats to lock them in place, as shown in FIGURE 3.

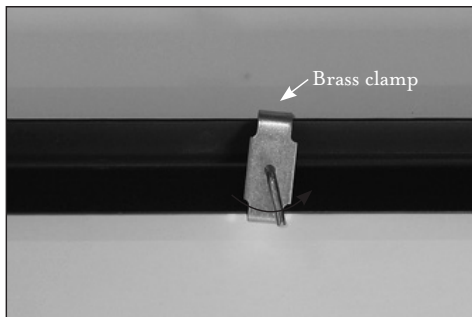


FIGURE 3

STEP 5: Screw the metal slats to the side rail supports using the 6 screws provided. Adjust the center feet as needed—these may need to be at different heights if the floor is not level. See FIGURE 4 for assembled frame example.

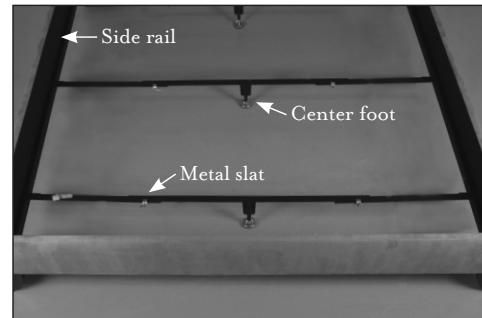


FIGURE 4

STEP 6: **For Corrado Bed Only** affix the wings to the side of the bed using the attached hinges in FIGURE 5.



FIGURE 5

STEP 7: Place the box spring and mattress in the bed frame.